



INSTALLATION AND OPERATION

**USER MANUAL**

[WWW.UNICORECOMM.COM](http://WWW.UNICORECOMM.COM)

# UM621N

**Automotive Grade Dual-frequency  
Multi-GNSS Integrated Positioning  
Module**

Copyright© 2009-2023, Unicore Communications, Inc.  
Data subject to change without notice.

## Revision History

Version	Revision History	Date
R1.0	First release	Oct. 2022

## Legal right notice

This manual provides information and details on the products of Unicore Communication, Inc. ("Unicore") referred to herein.

All rights, title and interest to this document and the information such as data, designs, layouts contained in this manual are fully reserved, including but not limited to the copyrights, patents, trademarks and other proprietary rights as relevant governing laws may grant, and such rights may evolve and be approved, registered or granted from the whole information aforesaid or any part(s) of it or any combination of those parts.

Unicore holds the trademarks of "和芯星通", "UNICORECOMM" and other trade name, trademark, icon, logo, brand name and/or service mark of Unicore products or their product serial referred to in this manual (collectively "Unicore Trademarks").

This manual or any part of it, shall not be deemed as, either expressly, implied, by estoppel or any other form, the granting or transferring of Unicore rights and/or interests (including but not limited to the aforementioned trademark rights), in whole or in part.

## Disclaimer

The information contained in this manual is provided "as is" and is believed to be true and correct at the time of its publication or revision. This manual does not represent, and in any case, shall not be construed as a commitments or warranty on the part of Unicore with respect to the fitness for a particular purpose/use, the accuracy, reliability and correctness of the information contained herein.

Information, such as product specifications, descriptions, features and user guide in this manual, are subject to change by Unicore at any time without prior notice, which may not be completely consistent with such information of the specific product you purchase.

Should you purchase our product and encounter any inconsistency, please contact us or our local authorized distributor for the most up-to-date version of this manual along with any addenda or corrigenda.

# Foreword

This document describes the information of the hardware, installation, specification and the use of Unicore UM621N modules.

## Document Structure

1. Product introduction
2. Installation guide
3. Technical specifications
4. Package
5. Clean
6. Reflow soldering

# Contents

<b>1</b>	<b>Introduction</b> .....	<b>1</b>
1.1	Overview .....	1
1.2	Key Specifications .....	2
1.3	Interfaces .....	4
<b>2</b>	<b>Product Installation</b> .....	<b>5</b>
2.1	Preparations.....	5
2.2	Hardware Installation .....	6
<b>3</b>	<b>Technical Specifications</b> .....	<b>7</b>
3.1	Electrical Specifications .....	7
3.2	Operational Conditions .....	7
3.3	Dimensions .....	8
3.4	Pin Definition.....	9
3.5	PCB Packaging.....	11
<b>4</b>	<b>Package</b> .....	<b>11</b>
4.1	Label Description .....	11
4.2	Ordering Information .....	11
4.3	Package Description.....	12
<b>5</b>	<b>Clean</b> .....	<b>13</b>
<b>6</b>	<b>Reflow Soldering</b> .....	<b>13</b>

# 1 Introduction

## 1.1 Overview

UM621N is a GNSS dual-frequency module with MEMS integrated navigation. It is designed for automotive applications based on the multi-system, dual-frequency and high-performance GNSS SoC – UFirebird II (UC6580A), which is independently developed by Unicore Communications, Inc. With the built-in six-axis inertial navigation device, the module supports multi-system dual-frequency joint positioning and single system standalone positioning, and can output GNSS+MEMS combined positioning results continuously even in tunnels and underground garages.

The chip of UM621N conforms to the requirements of AEC-Q100, and the manufacturing process is in line with IATF 16949.



Model	Ordering Code	PN	Grade		System							Interface			Data Update Rate		
			Professional	Automotive	GPS	BDS	GLONASS	Galileo	NAVIC*	QZSS	SBAS	UART1	UART2	I <sup>2</sup> C		SPI	
UM621N	02	2310414000008		•	•	•	•	•	•	•	•	•	•	•	•	•	1Hz/ 10Hz/ 20Hz*

\* The default data update rate is 1Hz, which can be configured to 10 Hz or 20 Hz, and the 20 Hz needs to be supported by specific firmware.

\* NAVIC is supported by specific firmware.

## 1.2 Key Specifications

Power	
Voltage	+2.7 V~3.6 V DC
Power Consumption	330 mW
RF Input	
Constellations	GPS/GLONASS/BDS/Galileo/QZSS/NAVIC (IRNSS)*
Standing Wave Ratio	≤2.5
Input Impedance	50 Ω
Antenna Gain	15 dB ~ 30 dB
Physical Characteristics	
Dimensions	16.0 mm*12.2 mm*2.4 mm
Environmental Specification	
Operating Temperature	-40 °C ~ +85 °C
Input/ Output Data Interface	
UART x 2	LVTTTL level Supported baud rate: 115200 ~ 460800 bps
I <sup>2</sup> C x 1	Address: 7 bit Operating in slave mode Transfer rate: 400 Kbps
SPI x 1	Alternate function of pin 18~21 Operating in slave mode Maximum transfer rate: 4 Mbps
GNSS Performance	
Frequencies	GPS L1 C/A, L1C*, L5 GLONASS L1 BDS B1I, B1C*, B2a Galileo E1, E5a NAVIC* L5 QZSS L1, L5 SBAS

Time to First Fix (TTFF)	Cold Start	30s
	Hot Start	2s
	Reacquisition	2s
Horizontal Positioning Accuracy	1.5 m CEP (dual-frequency quad-constellation, open sky)	
Velocity Accuracy (RMS)	0.1 m/s	
INS Positioning Error	3D gyro + 3D accelerometer + speed signal 2%	
	GNSS	
Sensitivity	Tracking	-165 dBm
	Acquisition	-148 dBm
	Hot Start	-158 dBm
	Reacquisition	-160 dBm
GNSS Data Update Rate	1 Hz / 10 Hz / 20Hz*	
INS Data Update Rate	100 Hz	
1PPS Accuracy (RMS)	20 ns	
Data Format	NMEA 0183, Unicore Protocol	

\* Items marked with an asterisk are supported by specific firmware.

## 1.3 Interfaces

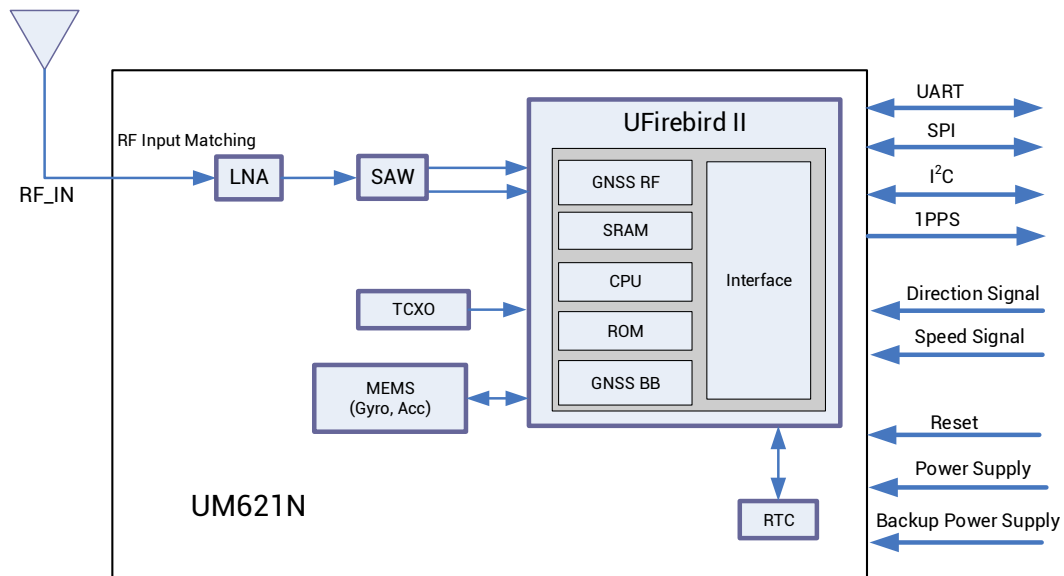


Figure 1-1 UM621N Block Diagram

### UART

UART1 is the main serial port of UM621N, supporting data transmission and firmware upgrade, and the signal input/output voltage level is LVTTTL. The baud rate can be configured by users flexibly, and the maximum is 460800bps. Ensure that UART1 is connected to a PC or an external processor for firmware upgrade.

UART2 only supports data transmission and can't be used for firmware upgrade.

### MEMS

UM621N integrates a six-axis MEMS, a three-axis gyro and a three-axis accelerometer. MEMS provides information on carrier attitude and speed changes, combined with GNSS data to output integrated positioning and navigation solution. The combination of GNSS+MEMS ensures better positioning performance than standalone GNSS, providing continuous and uninterrupted positioning, especially in the conditions with poor signals, such as tunnels, underground garages and urban canyons.

### 1PPS

UM621N outputs 1PPS with adjustable pulse width and polarity.

1PPS is not for timing application.

### nRESET

Active LOW, and the active time should be no less than 10 ms.



## 2 Product Installation

### 2.1 Preparations

UM621N modules are Electrostatic Sensitive Devices (ESD) and must be installed with special precautions when handling. Please take the following protective measures before opening the anti-static plastic box.

- Follow the steps in section 2.2 in the correct order.
- Electrostatic discharge (ESD) may cause damage to the device. All operations mentioned in this chapter should be performed on an antistatic workbench, using an antistatic wristband and a conductive foam pad. If the antistatic workbench is unavailable, wear an antistatic wristband and connect the other end to a metal frame to play a role in antistatic protection.
- Hold the edge of the module, and DO NOT touch any components of the module.
- Please check carefully whether the module is obviously loose or damaged. If there are any problems, please contact Unicore or the local dealer.

Figure 2-1 shows the typical installation of UM621N evaluation kit (EVK).

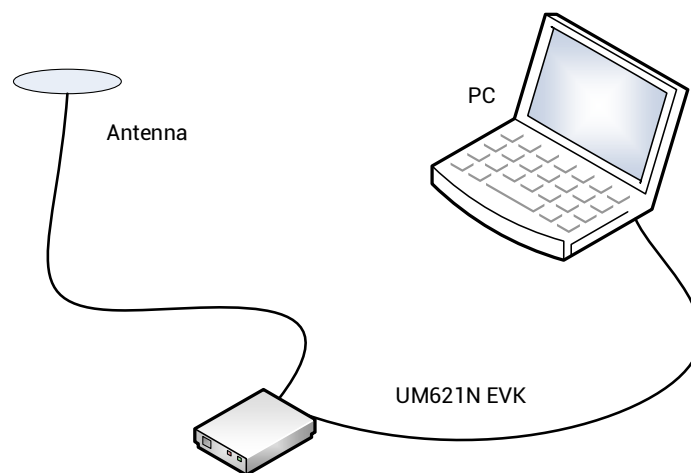


Figure 2-1 Typical Installation of UM621N

Please prepare the following items before installing UM621N.

- UM621N EVK (with AC Adapter)
- UM621N User Manual
- Unicore uSTAR software package

- Ancillary GNSS antenna
- USB cable and straight through serial cable
- PC or Laptop with serial ports (Windows 7 and above)

---

 Please keep the packing box and anti-static plastic box for storage and handling.

---

## 2.2 Hardware Installation

After the above preparations, please follow the steps below to install, which is used for satellite navigation test only.

Step 1: Make sure to take full anti-static measures, such as wearing an anti-static wristband and grounding the workbench.

Step 2: Open the UM621N evaluation kit and take out the evaluation board.

Step 3: Use the GNSS antenna with appropriate gain and fix it in a non-blocking area; use the appropriate cable to connect the antenna with UM621N evaluation board.

Step 4: Connect a PC to the EVK serial port through the USB cable or straight through serial cable.

Step 5: Open uSTAR software on the PC.

Step 6: Control the receiver through uSTAR to display constellations view, log messages, and receiver status, etc.

## 3 Technical Specifications

### 3.1 Electrical Specifications

#### Absolute Maximum Ratings

Item	Min	Max	Unit	Description
Power Supply (VCC)	-0.5	3.6	V	Main power supply
Backup Voltage (V_BCKP)	-0.5	3.6	V	Backup power supply for RTC
Digital IO Voltage	-0.5	3.6	V	Voltage of the digital signal pins
Antenna Input Power (RF_IN)	-	+3	dBm	Maximum input power of antenna
Storage Temperature (T <sub>STG</sub> )	-40	+85	°C	Storage temperature for the module

### 3.2 Operational Conditions

Item	Symbol	Min	Typical	Max	Unit	Condition
Power Supply (VCC)	VCC	2.7	3.3	3.6	V	
Ripple Voltage	V <sub>p-p</sub>			50	mV	
Peak Current	I <sub>ccp</sub>			134	mA	VCC=3.0 V
Tracking Average Current	I <sub>ACQ</sub>	95	110	122	mA	VCC=3.0 V
Low Level Input Voltage	V <sub>IL</sub>	0		0.2*VCC	V	
High Level Input Voltage	V <sub>IH</sub>	0.7*VCC		VCC + 0.2	V	
Low Level Output Voltage	V <sub>OL</sub>	0		0.4	V	I <sub>out</sub> =-2 mA
High Level Output Voltage	V <sub>OH</sub>	VCC-0.4		VCC	V	I <sub>out</sub> =2 mA
Antenna Gain	G <sub>ANT</sub>	15	20	30	dB	
Operating Temperature	T <sub>OPR</sub>	-40		+85	°C	

### 3.3 Dimensions

The dimensions of UM621N are as follows:

Parameter	Min (mm)	Typical (mm)	Max (mm)
A	15.9	16.0	16.5
B	12.05	12.2	12.35
C	2.2	2.4	2.6
D	0.9	1.0	1.3
E	1.0	1.1	1.2
F	2.9	3.0	3.1
G	0.9	1.0	1.3
H	0.7	0.8	0.9
K (Outer edge of the stamp hole)	0.7	0.8	0.9
N (Inner edge of the stamp hole)	0.4	0.5	0.6
M	0.8	0.9	1.0

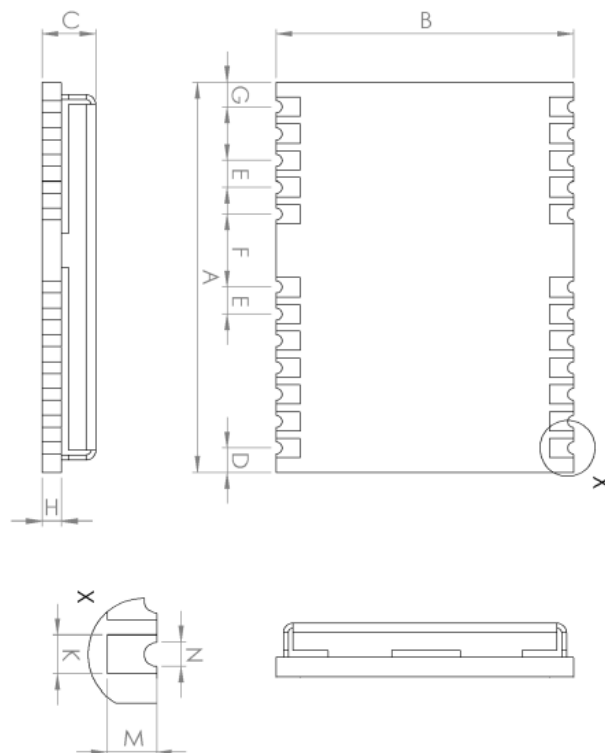


Figure 3-1 Mechanical Layout

### 3.4 Pin Definition

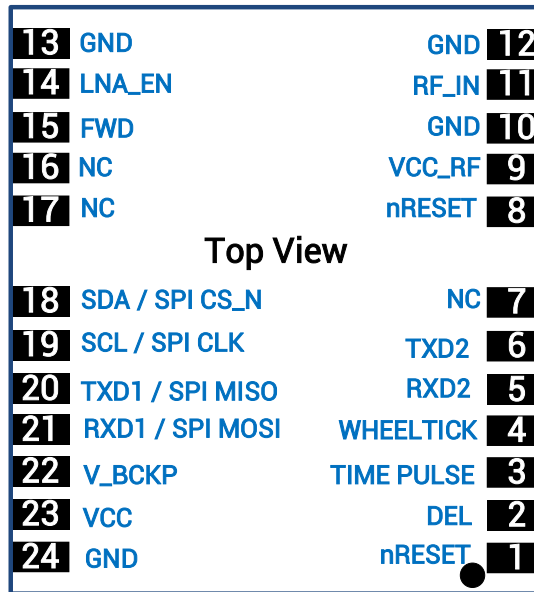


Figure 3-2 Pin Assignment

Pin No	Name	I/O	Electrical Level	Description
1	nRESET	I	LVTTTL	Reset pin, active low. Keep it floating if not in use.
2	DEL	I	—	Interface selection pin. If DEL is set low level, SPI is available. If DEL is set high or floating, UART and I <sup>2</sup> C become available.
3	TIMEPULSE	O	LVTTTL	Pulse per second (1PPS)
4	WHEELTICK	I	LVTTTL	Odometer speed pulse input. Keep it floating if not in use. It is strongly recommended to use this pin. The maximum pulse frequency is 5K Hz, and the minimum pulse width is greater than 100 us. <b>Note: Incorrect signals of the odometer will lead to serious problems in the use of the product. Please make sure the signal is correct.</b>
5	RXD2	I	LVTTTL	UART 2 receiving data
6	TXD2	O	LVTTTL	UART 2 transmitting data
7	NC	—	—	Floating
8	nRESET	I	LVTTTL	Reset pin, active low. Keep it floating if not in use.

Pin No	Name	I/O	Electrical Level	Description
9	VCC_RF	O		Antenna feed output. It is recommended to use an external power supply rather than the VCC_RF pin to feed the antenna.
10	GND	–	–	Ground
11	RF_IN	I	–	GNSS signal input
12	GND	–	–	Ground
13	GND	–	–	Ground
14	LNA_EN	O	–	Enable external LNA
15	FWD	I	LVTTTL	Odometer direction input. Keep it floating if not in use. It is strongly recommended to use it. High level = forward Low level = reverse <b>Note: Incorrect signals of the odometer will lead to serious problems in the use of the product. Please make sure the signal is correct.</b>
16	NC	–	–	Floating
17	NC	–	–	Floating
18	SDA / SPI CS_N	–	–	I <sup>2</sup> C data (D_SEL=VCC or floating)/SPI chip select (D_SEL=GND)
19	SCL / SPI CLK	–	–	I <sup>2</sup> C clock (D_SEL=VCC or floating)/SPI clock (D_SEL=GND)
20	TXD1/ SPI MISO	O	LVTTTL	SPI Master In Slave Out (D_SEL=GND); UART TXD signal (D_SEL=VCC or floating)
21	RXD1/ SPI MOSI	I	LVTTTL	SPI Master Out Slave In (D_SEL=GND); UART RXD signal (D_SEL=VCC or floating)
22	V_BCKP	I	1.7 V~3.6 V	Backup voltage supply, applicable for hot start. If you do not use hot start, connect V_BCKP to VCC. Do NOT leave it floating or connect it to ground.
23	VCC	–	2.7 V~3.6 V	Supply voltage
24	GND	–	–	Ground

### 3.5 PCB Packaging


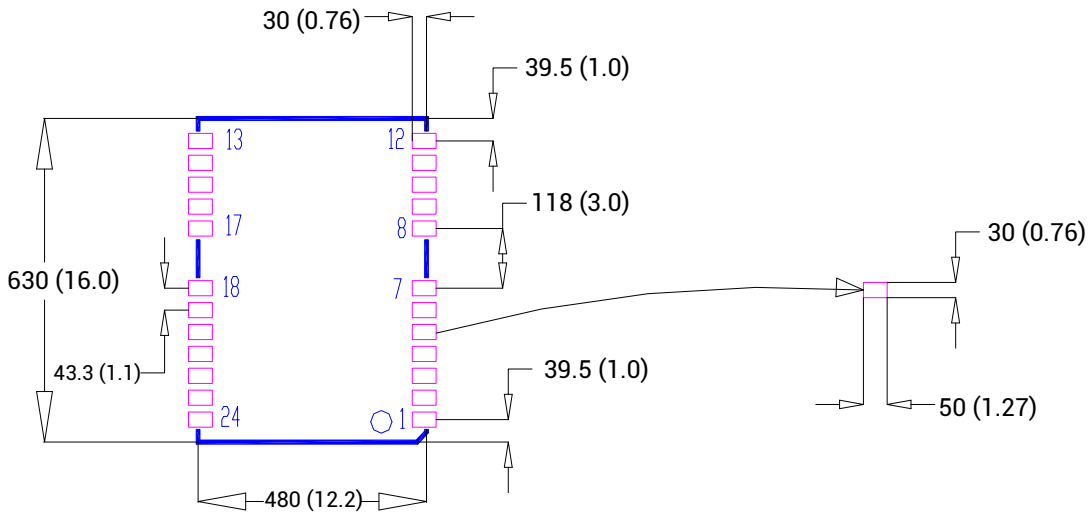


Figure 3-3 UM621N Recommended PCB Packaging (unit: mil, in brackets: mm)

When designing PCB solder mask, make sure that the area under UM621N is completely coated with solder mask.

## 4 Package

### 4.1 Label Description

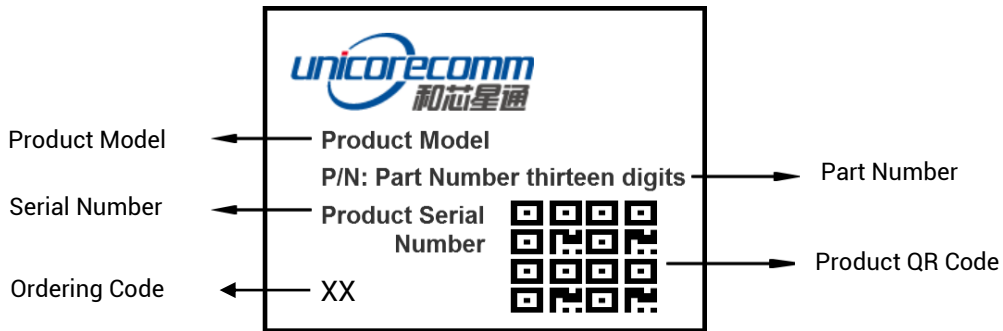

### 4.2 Ordering Information

Product Model	Ordering Code	PN	Description
UM621N	02	2310414000008	Automotive grade dual-frequency GNSS+MEMS module, supporting firmware upgrade, 16.0 mm x 12.2 mm, 500 pieces/reel

### 4.3 Package Description

The UM621N modules use carrier tape and reel (suitable for mainstream surface mount devices), packaged in vacuum-sealed aluminum foil antistatic bags, with desiccant inside to prevent moisture. When using reflow soldering process to solder the modules, please strictly comply with IPC standard to conduct temperature and humidity control. As packaging materials such as the carrier tape can only withstand the temperature of 55 degrees Celsius, modules shall be removed from the package during baking.



Figure 4-1 UM621N Module Package

Item	Description
Number of Modules	500 pieces/reel
Reel Size	Tray: 13"
	External diameter: 330 mm
	Internal diameter: 100 mm
	Width: 24 mm
	Thickness: 2.0 mm
Carrier Tape	Space between (center-to-center distance): 20 mm

UM621N modules are rated at MSL level 3. Please refer to the relevant IPC/JEDEC standards for baking requirements. Users may access to the website [www.jedec.org](http://www.jedec.org) to get more information.

The shelf life of UM621N modules packaged in vacuum-sealed aluminum foil antistatic bags is one year.



## 5 Clean

DO NOT use alcohol or other organic solvents to clean, which may lead to soldering flux residues flooding into the shielding shell, causing mildew and other problems.

## 6 Reflow Soldering

In order to avoid the device falling off, the module should be placed on the top of the main board during soldering. Reflow soldering temperature curve is recommended as shown in figure 6-1 below (M705-GRN360 is recommended for solder paste).

**Note: The module can only be soldered once.**

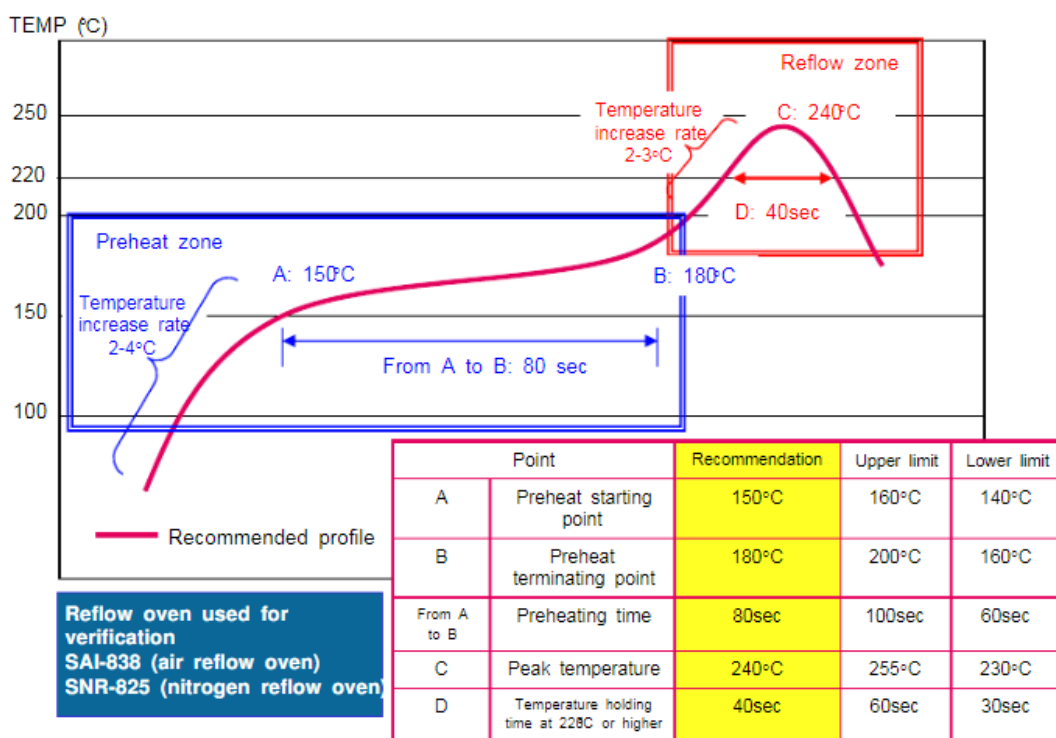


Figure 6-1 Reflow Soldering Temperature Curve

**Note:** The apertures in the stencil need to meet the customer's own design requirements and inspection specifications, and the thickness of the stencil should be above 0.15 mm. It is recommended to be 0.18 mm.

和芯星通科技（北京）有限公司

**Unicore Communications, Inc.**

北京市海淀区丰贤东路 7 号北斗星通大厦三层  
F3, No.7, Fengxian East Road, Haidian, Beijing, P.R.China,  
100094

[www.unicorecomm.com](http://www.unicorecomm.com)

Phone: 86-10-69939800

Fax: 86-10-69939888

info@unicorecomm.com



[www.unicorecomm.com](http://www.unicorecomm.com)